

Infrared Beaming

 
Beaming Information:

How to beam an appointment

1. To beam an appointment, in the calendar list, tap and hold the appointment. On the pop-up menu, tap Beam Appointment.


Tip: When using infrared (IR), align the IR ports according to the instructions in your owner's manual so that they are unobstructed and within a close range.

When using IR to receive a Beam from a previous version of Pocket PC or the Palm-size PC, tap Start > Programs > Infrared Receive.

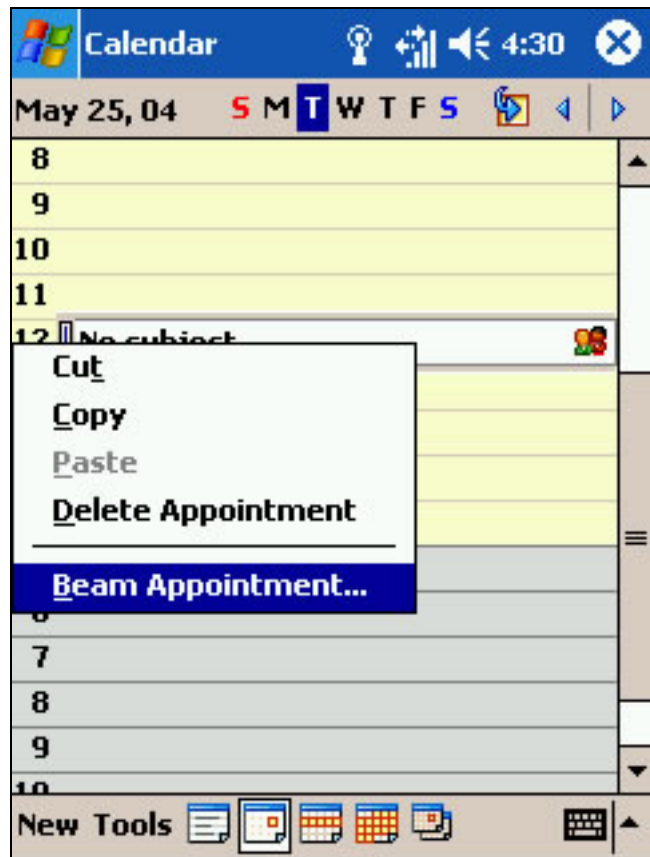


Beaming Information:

 How to beam a contact

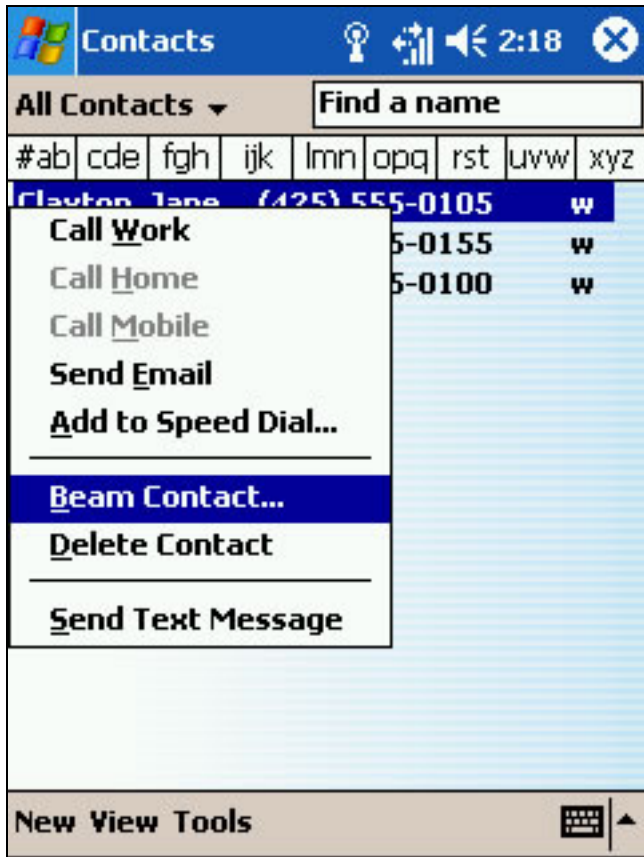

 1. To beam a contact, in the contact list, tap and hold the contact. On the pop-up menu, tap Beam Contact.

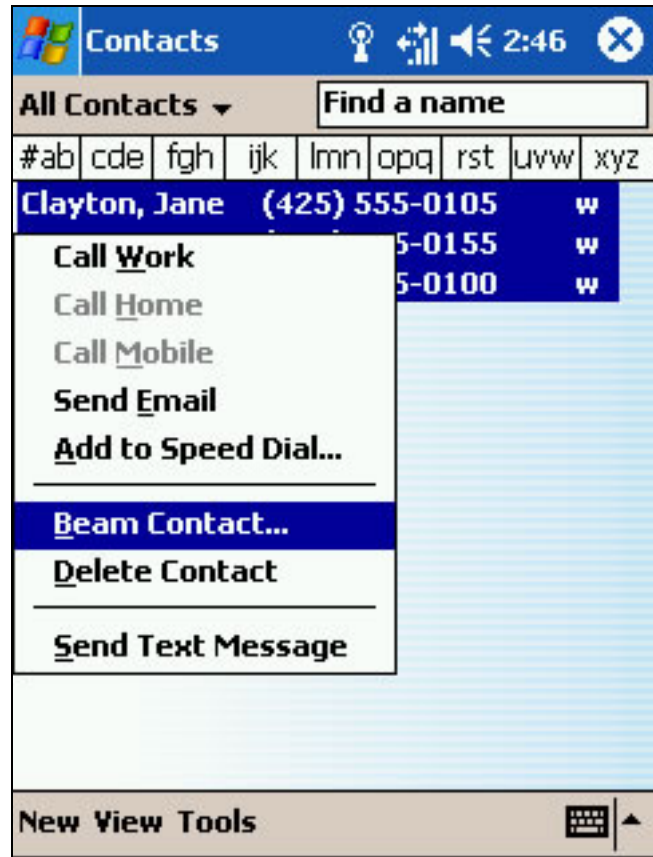

2. To beam multiple contacts, tap and drag to select the contacts. Then, tap Tools > Beam Contacts.

Tip: When using infrared (IR), align the IR ports according to the instructions in your owner's manual so that they are unobstructed and within a close range.

When using IR to receive a beam from a previous version of Pocket PC or the Palm-size PC, tap Start > Programs > Infrared Receive.

 
Beaming Information:

How to beam a task

1. To beam a task, in the task list, tap and hold the task. On the pop-up menu, tap Beam Task.

Tip: When using infrared (IR), align the IR ports according to the instructions in your owner's manual so that they are unobstructed and within a close range.

When using IR to receive a Beam from a previous version of Pocket PC or the Palm-size PC, tap Start > Programs > Infrared Receive.

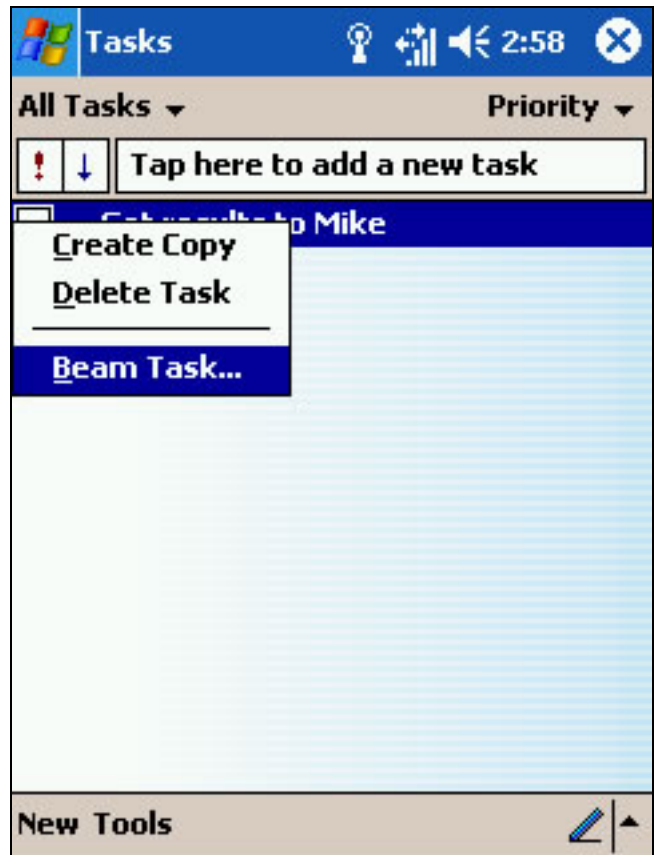


Beaming Information:

How to beam a document

1. To beam a document, in the document list, tap and hold the document. On the pop-up menu, tap Beam File.

Tip: When using infrared (IR), align the IR ports according to the instructions in your owner's manual so that they are unobstructed and within a close range.

 When using IR to receive a Beam from a previous version of Pocket PC or the Palm-size PC, tap Start > Programs > Infrared Receive.

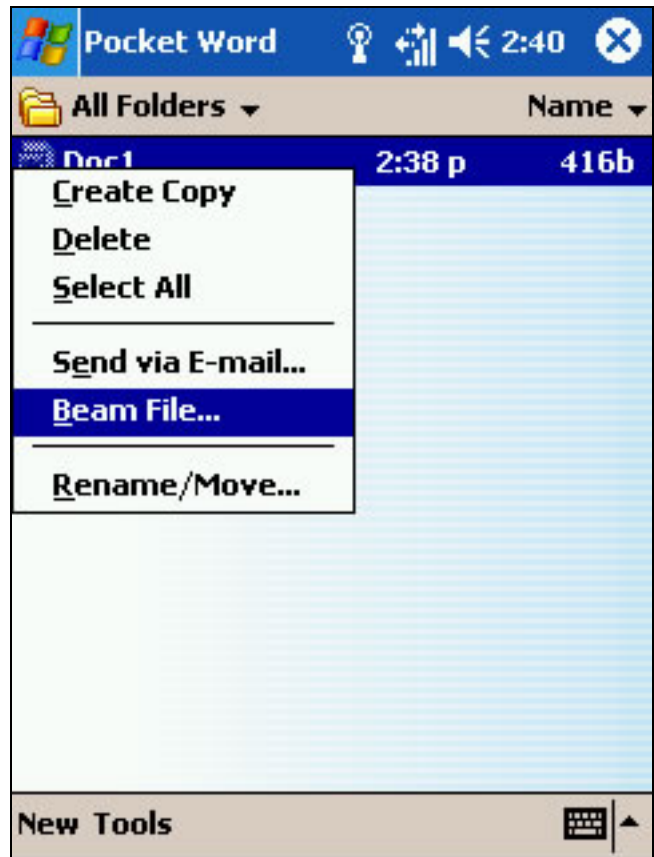


Beaming Information:

How to beam a workbook

1. To beam a workbook, in the workbook list, tap and hold the workbook. On the pop-up menu, tap Beam File.


Tip: When using infrared (IR), align the infrared (IR) ports according to the instructions in your owner's manual so that they are unobstructed and within a close range.

 When using IR to receive a Beam from a previous version of Pocket PC or the Palm-size PC, tap Start > Programs > Infrared Receive.

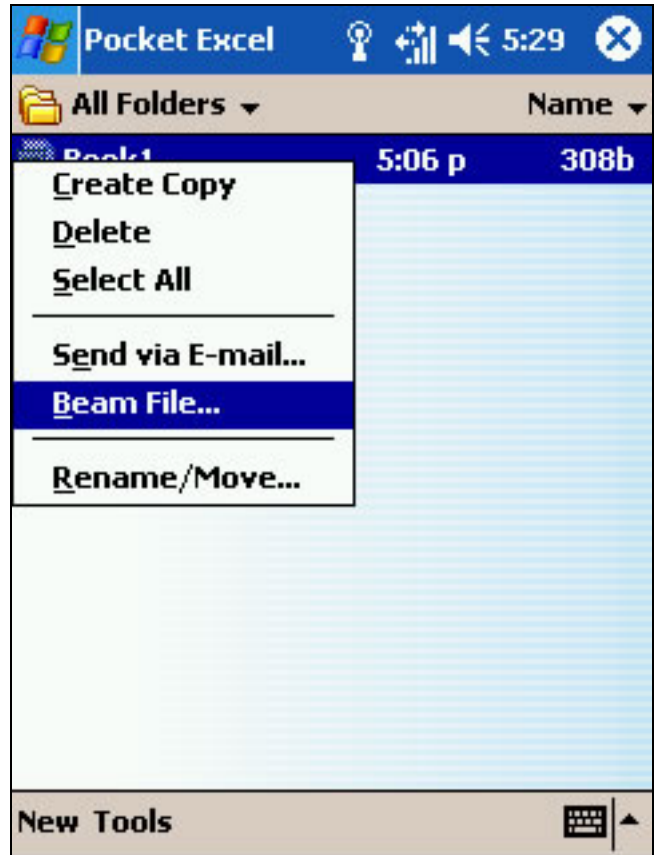


Settings:

 How to beam

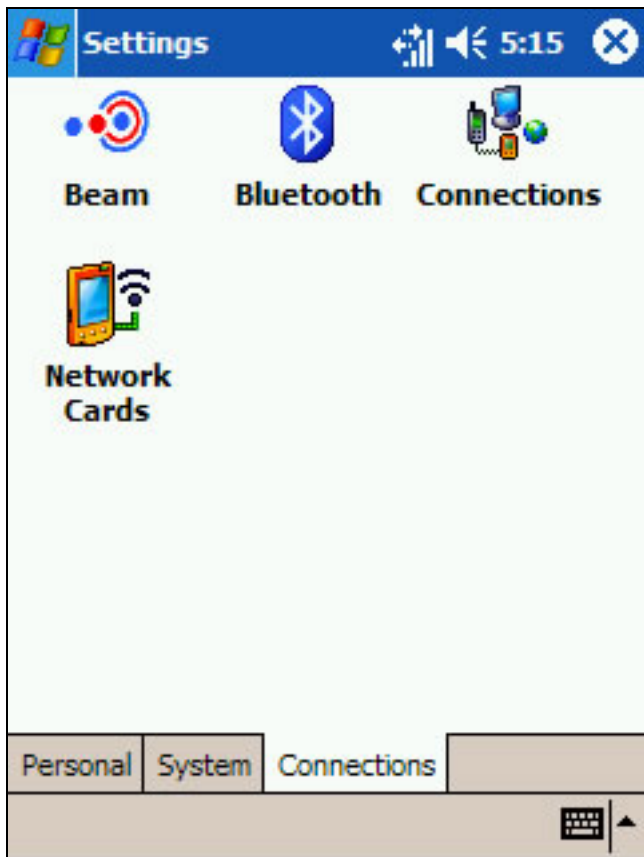

 1. Tap Start > Settings > Connections tab > Beam.

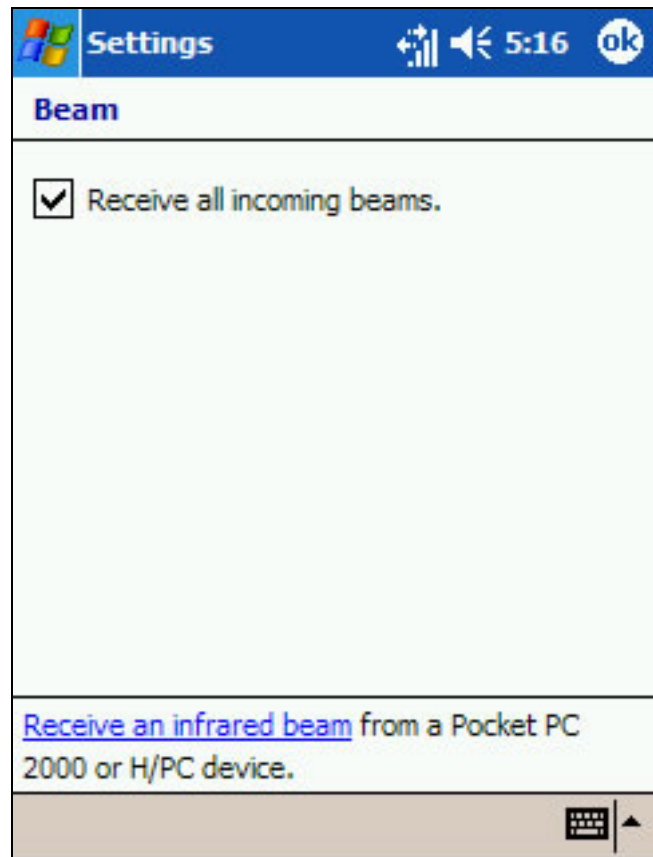


2. By default your device detects incoming infrared (IR) and Bluetooth beams and prompts you to accept them. If you do not want your device to detect or receive beams, clear the Receive all incoming beams check box.


Tip: If someone attempts to send you an IR beam from an older device, you may not be prompted to accept it. In this case, before the beam is sent from the other device, tap Receive an infrared beam at the bottom of the Beam screen.

Bluetooth:

 
How to receive a Bluetooth beam

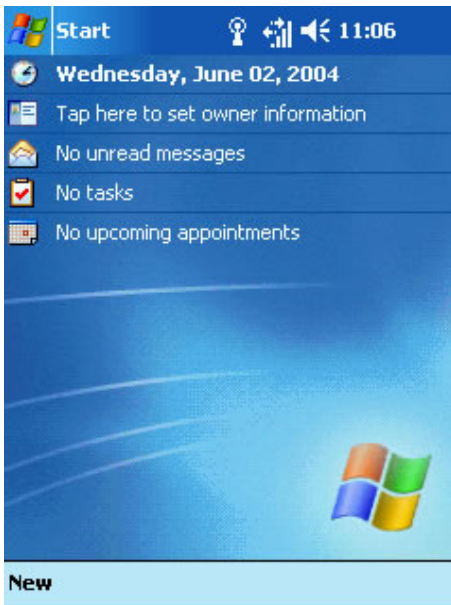

 1. Make sure that your device is configured to receive incoming beams.

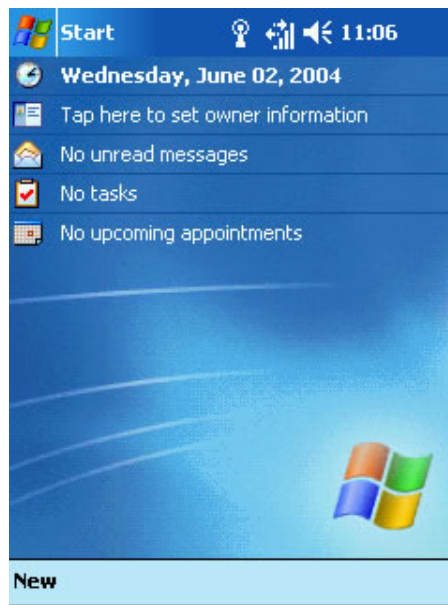

 2. Make sure that your device is turned on, discoverable, and within 10 meters (about 30 feet) of the device beaming the information.

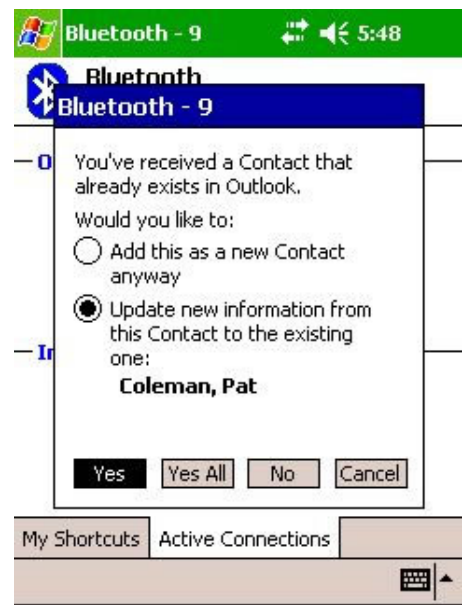

3. When prompted to receive an incoming beam, tap Yes.