

Windows Phone 7 Connector for Mac


Contents

Sync media files with your Windows Phone 7	2
Sync music	3
Sync photos or videos	5
Sync photos with your phone.....	5
Sync photos and videos with your phone	6
Sync photos and video on your phone with your Mac	6
Sync movies, TV shows, or podcasts	8
Sync movies.....	8
Sync TV shows	9
Sync podcasts	9
Remove media from your phone	11
Change what is synced	11
Delete selected media files.....	11
Delete all media files	11
Sync your phone with multiple computers	13
I can't sync some media files	14
I can't play synced music on my phone	15

Sync media files with your Windows Phone 7

[This topic is pre-release documentation and is subject to change in future releases. Blank topics are included as placeholders.]

Windows Phone 7 Connector for Mac is the tool you need to sync your favorite music, photos and videos, movies and TV shows, and podcasts from your Mac with your Windows Phone 7. You can also sync photos and videos you captured on your phone with your Mac, and when needed, update your Windows Phone 7 software.

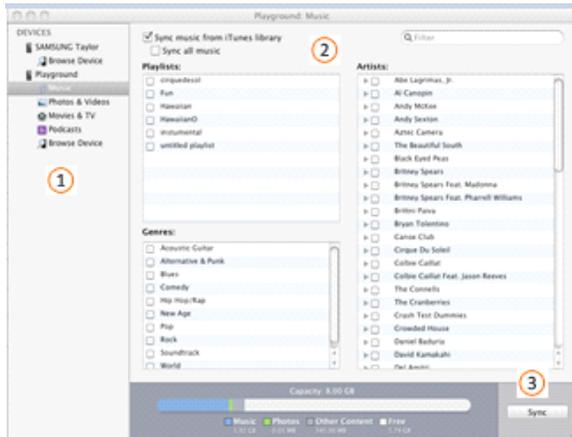

- 1 Navigation pane
- 2 Media list
- 3 Sync button

1. Connect your Windows Phone 7 to your Mac using the USB cable that came with your phone.


Windows Phone 7 Connector for Mac should open automatically. If it does not, on the right side of the menu bar, click , and then click **Launch Windows Phone 7 Connector**.

2. In the navigation pane, click the media type that you want to sync.
3. In the Media list, select the check box for the media files that you want to sync, and then click **Sync**.

Sync music

[This topic is pre-release documentation and is subject to change in future releases. Blank topics are included as placeholders.]

You can sync music and playlists from your iTunes library with your Windows Phone 7, so you can listen to your favorite music anywhere. To find the synced music on your Windows Phone 7, click **Music + Videos**, and then click **Music**. All music is organized by **artists**, **albums**, and **songs**. If you synced a playlist or genre, it is also listed under **playlist** or **genre**.

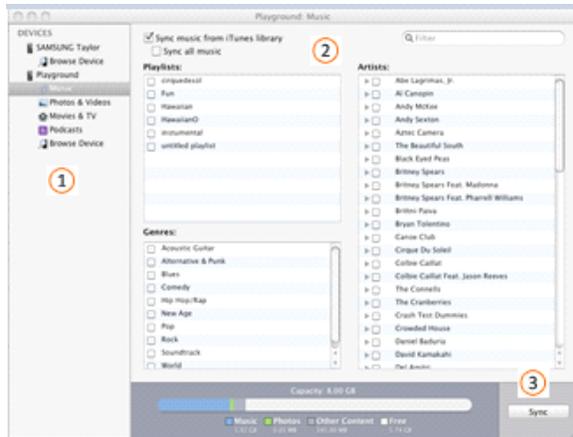

- 1 Navigation pane
- 2 Media list
- 3 Sync button

1. Connect your Windows Phone 7 to your Mac using the USB cable that came with your phone.

Windows Phone 7 Connector for Mac should open automatically. If it does not, on the right side of the menu bar, click , and then click **Launch Windows Phone 7 Connector**.

2. In the navigation pane, click **Music**.
3. Make sure that the **Sync music from iTunes library** check box is selected.

 **Tip** If this check box is not selected, you cannot select anything in the media list.

4. In the Media list, do one of the following:

To sync	Do this
All songs from a playlists	Under Playlists , select the check box for the playlist that you want to sync.
All songs from an album for a particular artist	Under Artists , click the arrow next to the artist's name, and then select the check box for album that you want to sync.  Tip To select all the albums for a particular artist, select the check box for the artist.
All songs from a particular genre	Under Genres , select the check box for the genre that you want to sync.

5. Click **Sync**.


6. To make sure that the music synced to your Windows Phone 7, in the navigation pane, click **Browse Device**, and then under **Items on this device**, check that the music is on your phone.

Disconnect your phone, and then listen to the music that you synced.

Sync photos or videos

[This topic is pre-release documentation and is subject to change in future releases. Blank topics are included as placeholders.]

You can sync photos and videos from your iPhoto library with your Windows Phone 7, so you can look at your favorite photos and videos anywhere. To save space on your phone, videos are not synced unless you specify that you want to include videos when you sync. You can also sync the photos and videos you captured on your phone with your Mac.

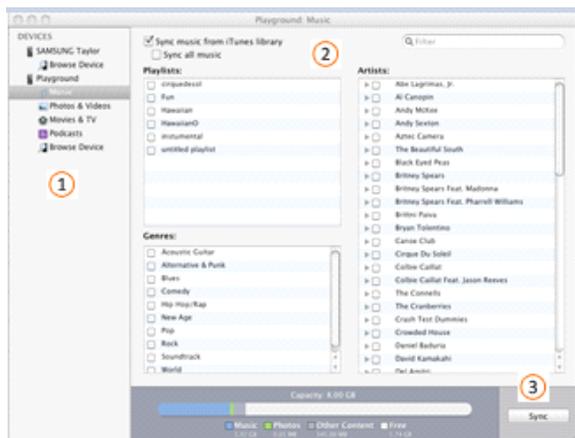

- 1 Navigation pane
- 2 Media list
- 3 Sync button

Do any of the following:

▼ Sync photos with your phone

To find the synced photos on your Windows Phone 7, click **Pictures**.

1. Connect your Windows Phone 7 to your Mac using the USB cable that came with your phone.
Windows Phone 7 Connector for Mac should open automatically. If it does not, on the right side of the menu bar, click , and then click **Launch Windows Phone 7 Connector**.
2. In the navigation pane, click **Photos & Videos**.
3. Make sure that the **Sync photos and videos from iPhoto library** check box is selected.

 **Tip** If this check box is not selected, you cannot select anything in the media list.

4. In the Media list, do one of the following:

To sync	Do this
All photos from an event	Under Events , select the check box for the event that you want to sync.
All photos for a particular person	Under Faces , select the check box for the face that you want to sync.
All photos from an album	Under Albums , select the check box for the album that you want to

sync.

5. Click **Sync**.
6. To make sure that the photos synced to your Windows Phone 7, in the navigation pane, click **Browse Device**, and then under **Items on this device**, check that the photos are on your phone.

Disconnect your phone, and then view the photos that you synced.

▼ Sync photos and videos with your phone

To find the synced videos on your Windows Phone 7, click **Music + Videos**, and then click **Videos**. Videos are listed under **personal** and **all**.

1. Connect your Windows Phone 7 to your Mac using the USB cable that came with your phone.

Windows Phone 7 Connector for Mac should open automatically. If it does not, on the right side of the menu bar, click , and then click **Launch Windows Phone 7 Connector**.

2. In the navigation pane, click **Photos & Videos**.
3. Make sure that the **Sync photos and videos from iPhoto library** check box is selected.

 **Tip** If this check box is not selected, you cannot select anything in the media list.

4. Select the **Include videos when sync photos** check box.
5. In the Media list, do one of the following:

To sync	Do this
All photos and videos from an event	Under Events , select the check box for the event that you want to sync.
All photos and videos for a particular person	Under Faces , select the check box for the face that you want to sync.
All photos and videos from an album	Under Albums , select the check box for the album that you want to sync.

6. Click **Sync**.
7. To make sure that the photos and videos synced to your Windows Phone 7, in the navigation pane, click **Browse Device**, and then under **Items on this device**, check that the photos and videos are on your phone.

Disconnect your phone, and then view the photos and videos that you synced.

▼ Sync photos and video on your phone with your Mac

By default, Windows Phone 7 Connector for Mac syncs any photos or videos captured on your phone with your Mac when you connect your phone to your Mac. This setting is device specific, and you can change the setting when the phone is connected to your Mac.

1. Connect your Windows Phone 7 to your Mac using the USB cable that came with your phone.


Windows Phone 7 Connector for Mac should open automatically. If it does not, on the right side of the menu bar, click , and then click **Launch Windows Phone 7 Connector**.

2. The photos and videos captured on your phone sync with your Mac. If this does not happen, click **Sync Options**.
3. Make sure that the **Sync photos and videos on my device with my Mac** check box is selected.

Sync movies, TV shows, or podcasts

[This topic is pre-release documentation and is subject to change in future releases. Blank topics are included as placeholders.]

You can sync movies, TV shows, and podcast from your iTunes library with your Windows Phone 7, so you can watch your favorite movies, TV shows, and podcasts anywhere.

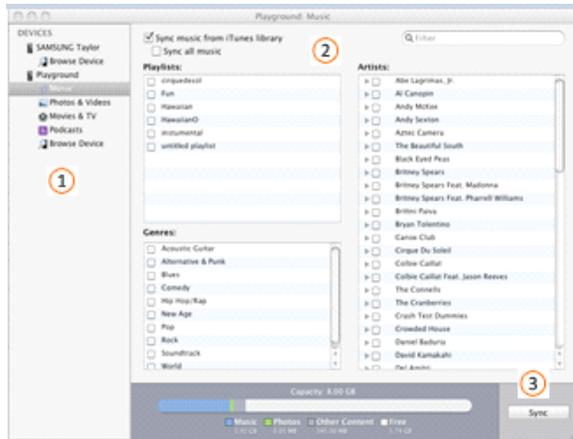

- 1 Navigation pane
- 2 Media list
- 3 Sync button

Do any of the following:

▼ Sync movies

To find the synced movies on your Windows Phone 7, click **Music + Videos**, and then click **Videos**. Movies are listed under **movies** and **all**.

1. Connect your Windows Phone 7 to your Mac using the USB cable that came with your phone.
Windows Phone 7 Connector for Mac should open automatically. If it does not, on the right side of the menu bar, click , and then click **Launch Windows Phone 7 Connector**.
2. In the navigation pane, click **Movies & TV Shows**.
3. Make sure that the **Sync movies and TV shows from iTunes library** check box is selected.
 **Tip** If this check box is not selected, you cannot select anything in the media list.
4. In the Media list, under **Movies & TV shows**, select the check box for the movies that you want to sync.
5. Click **Sync**.
6. To make sure that the movies synced to your Windows Phone 7, in the navigation pane, click **Browse Device**, and then under **Items on this device**, check that the movies are on your phone.

Disconnect your phone, and then watch the movies that you synced.

▼ Sync TV shows

To find the synced TV shows on your Windows Phone 7, click **Music + Videos**, and then click **Videos**. TV shows are listed under **tv shows** and **all**.

1. Connect your Windows Phone 7 to your Mac using the USB cable that came with your phone.

Windows Phone 7 Connector for Mac should open automatically. If it does not, on the right side of the menu bar, click , and then click **Launch Windows Phone 7 Connector**.

2. In the navigation pane, click **Movies & TV Shows**.
3. Make sure that the **Sync movies and TV shows from iTunes library** check box is selected.

 **Tip** If this check box is not selected, you cannot select anything in the media list.

4. In the Media list, under **Movies & TV shows**, select the check box for the TV shows that you want to sync.
5. Click **Sync**.
6. To make sure that the TV shows synced to your Windows Phone 7, in the navigation pane, click **Browse Device**, and then under **Items on this device**, check that the TV shows are on your phone.

Disconnect your phone, and then watch the TV shows that you synced.

▼ Sync podcasts

To find the synced podcasts on your Windows Phone 7, click **Music + Videos**, and then click **Podcasts**. Podcasts are organized by the type of podcast, so it is listed under **audio** or **video**.

1. Connect your Windows Phone 7 to your Mac using the USB cable that came with your phone.

Windows Phone 7 Connector for Mac should open automatically. If it does not, on the right side of the menu bar, click , and then click **Launch Windows Phone 7 Connector**.

2. In the navigation pane, click **Podcasts**.
3. Make sure that the **Sync podcasts from iTunes library** check box is selected.

 **Tip** If this check box is not selected, you cannot select anything in the media list.

4. In the Media list, under **Podcasts**, select the check box for the podcasts that you want to sync.
5. Click **Sync**.
6. To make sure that the podcasts synced to your Windows Phone 7, in the navigation pane, click **Browse Device**, and then under **Items on this device**, check that the podcasts are on your phone.

Disconnect your phone, and then watch the podcasts that you synced.

Remove media from your phone

[This topic is pre-release documentation and is subject to change in future releases. Blank topics are included as placeholders.]

When you sync media files from your Mac with your Windows Phone 7, hard drive space on your phone decreases. If you are tired of listening to a certain song or no longer want to view a photo that is out of date, you can delete the media file from your phone. This increases hard drive space on your phone so you can add different media.

 **Note** If you sync your Windows Phone 7 with multiple computers, the phone needs to be connected to the computer the media originated from to delete files.

Do any of the following:

▼ Change what is synced

You sync media files from your Mac with your phone by selecting a check box, and then clicking Sync. You can remove media files from the phone by clearing a check box, and clicking Sync.

1. Connect your Windows Phone 7 to your Mac using the USB cable that came with your phone.
Windows Phone 7 Connector for Mac should open automatically. If it does not, on the right side of the menu bar, click , and then click **Launch Windows Phone 7 Connector**.
2. In the navigation pane, click the media type that you want to remove.
3. In the Media list, clear the check box for the media files that you want to remove from your phone, and then click **Sync**.

▼ Delete selected media files

1. Connect your Windows Phone 7 to your Mac using the USB cable that came with your phone.
Windows Phone 7 Connector for Mac should open automatically. If it does not, on the right side of the menu bar, click , and then click **Launch Windows Phone 7 Connector**.
2. In the navigation pane, click **Browse Device**, and then under **Items on this device**, click the media that you want to delete.

 **Tip** To select more than one item, hold down , and then click the media that you want to delete.

3. Click **Delete Selected Items**.

▼ Delete all media files

If you filled the phone hard drive with media that you do not want to access anymore, you can delete all the media files on your phone. When you do this, you will remove all media files from your phone including photos and video that you captured on your phone and any media files you downloaded.

1. Connect your Windows Phone 7 to your Mac using the USB cable that came with your phone.

Windows Phone 7 Connector for Mac should open automatically. If it does not, on the right side of the menu bar, click , and then click **Launch Windows Phone 7 Connector**.

2. Click **Sync Options**.
3. Click **Delete All Content**, and then in the dialog that appears, click **Format**.

Sync your phone with multiple computers

[This topic is pre-release documentation and is subject to change in future releases. Blank topics are included as placeholders.]

Windows Phone 7 Connector for Mac allows you to sync your favorite music, photos and videos, movies and TV shows, and podcasts from a Mac with your Windows Phone 7. You can sync your phone with multiple computers, both Windows computers and Macs, but you manage your media files on the computer the media originated from. For example, you connect your phone to a Mac named MacOne and sync photos located on MacOne with your phone. Then you connect your phone to a Mac named MacTwo and sync photos located on MacTwo with your phone. When you click **Browse Device**, you see that the photos from both MacOne and MacTwo are on your phone, but when you click **Photos & Videos**, you see the photos that are located on MacTwo because that is the computer your phone is connected to.

Important

You can't use your phone to transfer media from one computer to another. By default, Windows Phone 7 Connector for Mac syncs any photos or videos captured on your phone with your Mac when you connect your phone to your Mac. You can sync photos and videos from your phone to one computer. When you connect your phone to a second computer, the photos and videos that were synced with another computer will not sync with the second computer.

1. Connect your Windows Phone 7 to a Mac using the USB cable that came with your phone. For example, a Mac named MacOne.
2. In the navigation pane, click the media type that you want to sync.
3. In the Media list, select the check box for the media files that you want to sync, and then click **Sync**.
4. Disconnect your phone.
5. Connect your Windows Phone 7 to another Mac using the USB cable that came with your phone. For example, a Mac named MacTwo.
6. Click **Enable Sync**, and then repeat steps 2 through 4.

I can't sync some media files

[This topic is pre-release documentation and is subject to change in future releases. Blank topics are included as placeholders.]

Cause: Certain media files in your iTunes or iPhoto library are protected and you can't sync this media to other devices.

▼ **Solution:** [Check to see if the media file is protected.](#)

1. In iTunes, click the media file, and then on the **File** menu, click **Get Info**.

 **Note** In iPhoto, **Get Info** is located on the **Photos** menu.

2. On the **Summary** tab, next to **Kind** see if the file type has the word *Protected* in it. For example, *Protected MPEG-4 file*.

Cause: You can't use your Windows Phone 7 to transfer media from one computer to another.

▼ **Solution:** [Use another method to move media from one computer to another.](#)

One alternative is to use a portable hard drive or USB drive to move media from one computer to another.

Cause: You can sync photos and videos captured on your phone to one computer only. When you connect your phone to a second computer, the photos and videos that were synced with another computer will not sync with the second computer.

▼ **Solution:** [Use another method to move media from one computer to another.](#)

One alternative is to use a portable hard drive or USB drive to move media from one computer to another.

I can't play synced music on my phone

[This topic is pre-release documentation and is subject to change in future releases. Blank topics are included as placeholders.]

Cause: Windows Phone 7 can't play Apple lossless encoded (AAC) files.

▼ **Solution:** Convert the Apple lossless encoded (AAC) file to a compressed AAC file.

1. In iTunes, hold down CONTROL, and then click the media file that you want to convert to compressed AAC file.
2. Click **Create AAC Version**.

