




1111 Part No. X16-79618-02

Xbox 360 Quick Charge Kit

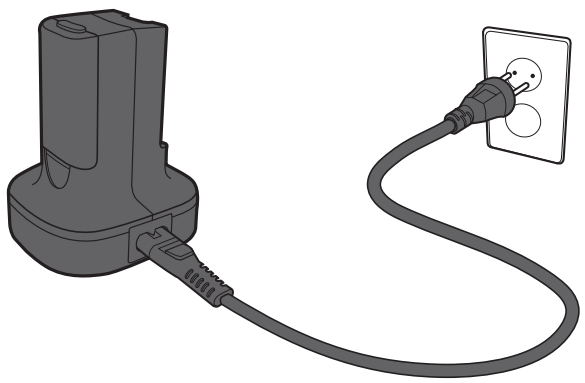

Thanks for choosing the Xbox 360® Quick Charge Kit. Your Quick Charge Kit lets you quickly recharge your Xbox 360 rechargeable battery packs with up to 40 hours of play time for a fully charged battery pack. It is for use exclusively with the rechargeable battery pack for the Xbox 360 video game and entertainment system. The Quick Charge Kit contains a charger, a power cord, and a NiMH rechargeable battery pack.

⚠ WARNING

Before using this product, read this manual and the Xbox 360 console instructions for important safety and health information. Keep all manuals for future reference. For replacement manuals, visit www.xbox.com/support.

⚠ Rechargeable Battery Safety

Only use Microsoft approved rechargeable battery packs, identified by the Xbox 360 Compatible logo, with your wireless controller and quick charge kit. Use of unapproved battery packs may result in injury from burns, fire, or explosion. Improper use of batteries may result in battery fluid leakage, overheating, or explosion. Released battery fluid is corrosive and may be toxic. It can cause skin and eye burns, and is harmful if swallowed. To reduce the risk of injury:

- Charge only with the Xbox 360 quick charger, the Xbox 360 Play & Charge Kit, or another Microsoft approved charger.
- Keep batteries out of reach of children.
- Do not heat, open, puncture, mutilate, or dispose of batteries in fire.
- If a battery leaks, remove the battery, taking care to keep the leaked fluid from touching your skin or clothes. If fluid from the battery comes into contact with skin or clothes, flush skin with water immediately. Before inserting a new battery, thoroughly clean the controller with a damp paper towel.
- Recycle or dispose of batteries in accordance with local and national disposal regulations, including those governing the recovery and recycling of waste electrical and electronic equipment (WEEE).
- Do not allow metal objects to touch the battery terminals; they can become hot and cause burns. For example, do not carry the battery in a pocket with keys or coins.

⚠ Electrical Safety

As with many other electrical devices, failure to take the following precautions can result in serious injury or death from electric shock or fire or damage to the quick charger. Select an appropriate power source for your quick charger:

- Use only the power cord that came with your Quick Charge Kit or that you received from an authorised repair centre.
- Do not use non-standard power sources, such as generators or inverters, even if the voltage and frequency appear acceptable. Only use AC power provided by a standard wall outlet.

To avoid damaging the power cord:

- Protect the power cord from being walked on.
- Protect the cord from being pinched or sharply bent, particularly where it connects to the power outlet and the quick charger.
- Do not jerk, knot, sharply bend, or otherwise abuse the power cord.
- Do not expose the power cord to sources of heat.
- Keep children and pets away from the power cord. Do not allow them to bite or chew on it.
- When disconnecting the power cord, pull on the plug—do not pull on the cord.

If the power cord becomes damaged in any way, stop using it immediately and contact Xbox Customer Support for a replacement.

Unplug your quick charger during lightning storms or when unused for long periods of time.

Connect the power cord by completely inserting the power cord connector into the charger until it stops.

USE YOUR QUICK CHARGE KIT

Charge the Battery Pack

Charge your Xbox 360 Rechargeable Battery Pack before first use and whenever it is depleted.

To charge the battery pack using the quick charger:

- 1 Insert the rechargeable battery pack into either battery compartment on the quick charger and push in to lock.

NOTE

To avoid pinching your fingers when inserting, push only on the flat surface of the battery pack.

- 2 Connect the quick charger to a wall outlet with the quick charger power cord.

The corresponding light on the quick charger will glow red as your battery pack charges.

When the light switches to green, the battery pack is fully charged and can be removed for use with your wireless controller.

NOTES

- Do not touch quick charger or battery pack terminals with your fingers or allow metal parts to touch them. Doing so may damage them.
- Typically, fully charging can take up to two hours for one new battery pack or four hours for two new battery packs using the Xbox 360 Quick Charge Kit. Actual charge times vary depending on the state or condition of the battery pack being charged.
- The battery pack or the charger may become warm during charging or use. This is normal and does not indicate a problem with the battery pack.
- If the battery pack is unused for a long time, it may lose its charge. If this occurs, simply recharge the battery pack normally.
- At first, or after storage for a long period of time, it can take from three to five full charge cycles for the battery pack to achieve its full capacity.
- The battery pack has a limited life. The amount of play time will decrease as the battery pack ages or after many recharge cycles. The battery pack needs to be replaced when play time becomes too short or when it can no longer be charged.

Clean Your Battery Pack

If it is necessary to clean the battery contacts, use only a dry cloth. Water or chemicals can damage the contacts.

TROUBLESHOOTING

If you encounter problems, try the possible solutions provided below.

Charge Light Doesn't Glow

Make sure the battery pack is completely locked in to the charger battery compartment. If the battery pack is completely locked in to the compartment and the light does not glow green or red, the battery pack or charger may be defective.

NOTE

Damaged battery packs will not charge and could harm your controller. Battery packs that have been crushed, immersed in liquids, or exposed to intense heat may be damaged beyond use and should be disposed of in accordance with local laws.

Battery Pack Charges Slowly

Very depleted rechargeable battery packs can take longer to charge.

Battery Pack Charge Depletes Quickly

The amount of play time will decrease as the battery pack ages or after many recharge cycles. The battery pack should be replaced when play time becomes unacceptably short or when it can no longer be charged.

IF YOU NEED MORE HELP

For answers to common questions, troubleshooting steps, and Xbox Customer Support contact information, visit www.xbox.com/support.

Do not take your Xbox 360 console or its accessories to your retailer for repair. Please visit www.xbox.com/support for troubleshooting and service information.

⚠ Do Not Attempt Repairs

Do not attempt to take apart, service, or modify the Xbox 360 console, power supply, or its accessories in any way. Doing so could present the risk of serious injury or death from electric shock or fire, and it will void your Express Warranty.

Disposal of Waste Batteries and Electrical & Electronic Equipment

This symbol on the product or its batteries or its packaging means that this product and any batteries it contains must not be disposed of with your household waste. Instead, it is your responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. For more information about where to drop off your batteries and electrical and electronic waste, please contact your local city/municipality office, your household waste disposal service, or the shop where you purchased this product.

This product contains NiMH batteries.

This product is for use with NRTL-listed (UL, CSA, ETL, etc.) and/or IEC/EN 60950 compliant (CE marked) Information Technology equipment.

Important Battery Information



Waste batteries, please recycle.

FOR CUSTOMERS IN TAIWAN

Product Information

Product name: Xbox 360 Quick Charge Kit
Model no.: DPSN-10EB A
Designated voltage: 5 VDC
Manufacture year: 2010
Manufacture number: 82-2-531-4839
Country of origin: China
Manufacturer name: Microsoft Corporation
Importer name: Synnex Technology International
Importer's Address: 4th Fl. 75, Section 3, Min-Sheng E. Rd., Taipei 104
Importer's number: (02) 2506-3320

COPYRIGHT


Information in this document, including URL and other Internet Web site references, is subject to change without notice. Unless otherwise noted, the example companies, organisations, products, domain names, e-mail addresses, logos, people, places and events depicted herein are fictitious, and no association with any real company, organisation, product, domain name, e-mail address, logo, person, place or event is intended or should be inferred. Complying with all applicable copyright laws is the responsibility of the user. Without limiting the rights under copyright, no part of this document may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the express written permission of Microsoft Corporation.

Microsoft may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from Microsoft, the furnishing of this document does not give you any license to these patents, trademarks, copyrights, or other intellectual property.

© 2011 Microsoft Corporation. All rights reserved.

Microsoft, Xbox, Xbox 360, Xbox LIVE, the Xbox logos, and the Xbox LIVE logo are trademarks of the Microsoft group of companies.

Xbox 360 快速充電套件

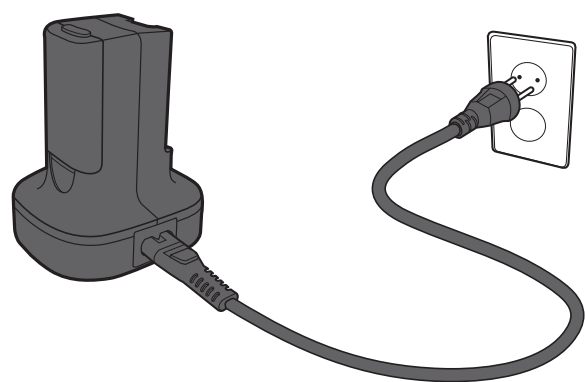

感謝您購買 Xbox 360® 快速充電套件。快速充電套件可快速為您的 Xbox 360 可充式電池組充飽電力。Xbox 360 快速充電套件僅可與適用於 Xbox 360 視訊遊戲家庭娛樂系統的 Xbox 360 可充式電池組搭配使用。快速充電套件含有一個充電器、電源線和可充式鎳氫電池組。

⚠ 警告

在使用此產品前，請閱讀本手冊與 Xbox 360 主機手冊，以取得重要的安全和健康資訊。請妥善保存所有手冊，以供未來參考之用如需更換手冊，請至 www.xbox.com/support。

亞太國家/地區專用 (澳大利亞除外)
有限瑕疵擔保網址 www.xbox.com/warranty

本產品的廢棄處理需依照當地和全國廢棄物處理規定 (如果適用)，包括管理廢棄電子電機設備 (WEEE) 的再生與回收的相關規定。

⚠ 可充式電池的安全

請認明具有與 Xbox 360 相容商標且經過 Microsoft 核准的可充式電池組，來與您的無線控制器和快速充電套件搭配使用。使用未經核准的電池組可能導致灼傷、火災或爆炸等意外危險。電池使用不當可能會導致電池液體外洩、過熱或爆炸。外洩的電池

液具有腐蝕性而且可能具有毒性有毒。若其接觸到皮膚與眼睛將會導致灼傷，如果吞嚥也會導致傷害。若要降低傷害的風險：

- 僅使用 Xbox 360 快速充電器、Xbox 360 同步充電套件或其它 Microsoft 核准的充電器進行充電。
- 請將電池放置於孩童拿不到的地方。
- 請勿加熱、開啟、穿刺、拆解或將電池置於火中。
- 若電池的電解液漏出，請立即將電池取出，並避免您的皮膚或衣物接觸到外洩的電解液。若皮膚或衣服接觸到電池的化學液體，請立即用清水加以沖洗。在放入新電池之前，請用濕紙巾將控制器確實清理乾淨並待風乾。
- 電池的回收與廢棄處理需依照當地和全國廢棄物處理規定，包括管理廢棄電子電機設備 (WEEE) 的再生與回收的相關規定。
- 請勿讓金屬物品觸碰電池終端，這會導致它們變燙並可能會燃燒。例如，勿將電池放在有鑰匙或銅板的口袋中。

⚠ 電器安全性

如同許多其他電器裝置，若不採取下列預防措施將會引起電擊或火苗而導致嚴重傷害或死亡，或對快速充電器造成損壞。

為您的快速充電器選取適當的電源：

- 只使用快速充電套件隨附或授權維修中心所提供的電源線。
- 即使電壓與頻率一致，也請勿使用非標準的電源，像是發電機或換流器。只使用標準電源插座的 AC 電源。

若要避免對電源線造成損壞：

- 保護電源線避免被踩到。
- 保護電源線讓它不被夾住或嚴重彎折，尤其是在它們連接到電源插座及快速充電器處。
- 勿讓電源線被拉扯、打結、嚴重彎曲或以其他不正當方式對待。
- 勿讓電源線暴露在熱源下。
- 讓兒童與寵物遠離電源線，勿讓他們啃咬電源線。
- 中斷電源線連接時，請拉住插頭而非拉扯電源線。
- 如果電源線損壞，請立即停止使用，並與 Xbox 客戶支援部門聯絡以更換之。

在有閃電的風暴，或長時間不使用時，請拔除快速充電器的插頭。

將電源連接器完全插入充電器中，以連接電源線。

使用您的快速充電套件

為您的電池組充電

第一次使用前或電量耗盡時，請為您的 Xbox 360 可充式電池組充電。

如何使用快速充電器為電池組充電：

- 將可充式電池組置入快速充電器的電池槽中並推入固定。

注意

為避免您的手指夾到，請只對電池盒平坦的表面施壓。

- 將快速充電器連接上快速充電器電源線。

在為電池組充電時，快速充電器上相對的燈號會變紅光並且閃爍。當燈號變成綠光時，表示電池組已經充滿，可以予以移除並且用於無線控制器。

注意

請避免直接用手指或金屬物品觸碰快速充電器或電池組終端。這麼做可能會傷害到快速充電器和電池組。

一般來說，使用 Xbox 360 快速充電套件充電一組新的電池組可能需要兩小時時間，兩組新的電池組則要四小時。實際充電的時間會依電池組充電時的狀態和狀況而異。

電池或充電器的溫度在充電時會提高，這是正常的，並非表示電池組有問題。

電池長時間不使用時，電力可能會流失，此時只要依照一般程序充電即可。

第一次使用前或在長時間存放後，電池組會需要三到五次完整充電週期才能達到其最大電量。

電池組的壽命有限。遊戲時間會因為電池組本身的壽命或充電次數太多而縮短。當遊戲時間太短或當電池已無法充電時，應置換電池組。

清理您的電池組

如果有必要清理電池接觸點時，請使用乾布。水或化學清潔劑可能會使接觸點損壞。

疑難排解

如果您遇到了問題，請嘗試以下所提供的解決方案。

充電燈號沒有亮起

確定電池組有完全固定在充電器的電池槽中。如果電池組已完全固定在電池槽中，但是燈號沒有亮起綠光或紅光，代表電池組或充電器可能有問題。

注意

損壞的電池組無法再充電，而且可能會傷害您的控制器。若您的電池組曾遭到碰撞、與液體接觸、或放在高溫熱源旁，可能已損壞無法使用，並且應該遵循當地廢棄物規定處理。

電池組充電緩慢

已經完全耗盡的可充式電池組可能需要較長的時間才能充滿。

電池組充電迅速耗盡

遊戲時間會因為電池本身的壽命或充電次數太多而縮短。當遊戲時間太短或當電池已無法充電時，應置換電池組。

如果您需要更多幫助


如需一般問題的解答、疑難排解步驟以及 Xbox 客戶支援部門連絡資訊，請前往 www.xbox.com/support。

請勿將您的 Xbox 360 主機或其周邊配備拿到經銷商處要求維修，請至 www.xbox.com/support 參閱疑難排解與服務資訊。

請勿嘗試自行維修

請勿嘗試拆解、維修或修改 Xbox 360 主機、電源供應器或其周邊配備。這麼做可能會產生電擊或火苗而導致嚴重傷害或死亡，而您的保證也將無效。

廢棄電池與電子電機設備處理

 當本符號出現在產品、產品電池或產品包裝上時，代表該產品及其電池不得與家庭廢棄物一同丟棄。而您必須負起責任，將此廢棄物送至適當的電池與電子電機設備回收點。此與家庭廢棄物分開的收集與回收行動，有助於保育自然資源，並防止因電池與電子電機設備的不當廢棄處理，導致其中的有害物質對人體健康與環境造成負面影響。如需了解您所在地的電池與電子電機設備廢棄處理場所的相關資訊，請與您當地的市政機關、家庭廢棄物處理服務機構，或您購買該產品的店家連絡。

本產品用於 NRTL 表列 (UL、CSA、ETL 等) 及/或遵照 IEC/EN 60950 (有 CE 標示) 資訊技術產品設備。

重要電池資訊



廢電池請回收。

台灣地區的客戶 本產品資訊

產品名稱：Xbox 360 快速充電套件

型號：DPSN-10EB A

額定電壓：5 VDC

產地：中國

製造廠商：Microsoft Corporation

進口廠商：聯強國際股份有限公司

地址：台北市 104民生東路三段 75 號四樓

洽詢專線：(02) 2506-3320

著作權

本文件中的資訊 (包括 URL 及其他網際網路網站參考資料) 如有變更，恕不另行通知。除非另有註明，否則本文之範例公司、組織、產品、網域名稱、電子郵件地址、標章、人員、地點及事件均為虛構，並非意指任何真實公司、組織、產品、網域名稱、電子郵件地址、標章、人員、地點及事件。遵守所有適用的著作權法是使用者的責任。基於 (但不限於) 著作權法下之權利，未經 Microsoft Corporation 明示書面許可，貴用戶不得為任何目的使用任何形式或方法 (電子形式、機械形式、影印、記錄或其他方法) 複製、儲存或傳送本文件的任何部分或將本文件任何部分放入檢索系統 (retrieval system)。


Microsoft 可能就本文所提及內容及文件標的擁有專利權、專利申請權、商標權、著作權、或其他智慧財產權。除非 Microsoft 書面授權合約明示規定者外，提供本文件並不授予用戶上述專利權、商標權、著作權或其他智慧財產權。

© 2011 Microsoft Corporation. 著作權所有，並保留一切權利。

Microsoft、Xbox、Xbox 360、Xbox LIVE、Xbox 標誌、Xbox LIVE 標誌係 Microsoft 集團的商標。

Xbox 360 급속 충전 키트

Xbox 360® 급속 충전 키트를 구입해 주셔서 감사합니다. 급속 충전 키트를 사용하여 Xbox 360 충전 배터리 팩을 빠르게 충전할 수 있습니다. Xbox 360 급속 충전 키트는 Xbox 360 충전 배터리 팩과 Xbox 360 비디오 게임 및 엔터테인먼트 시스템에만 사용할 수 있습니다.

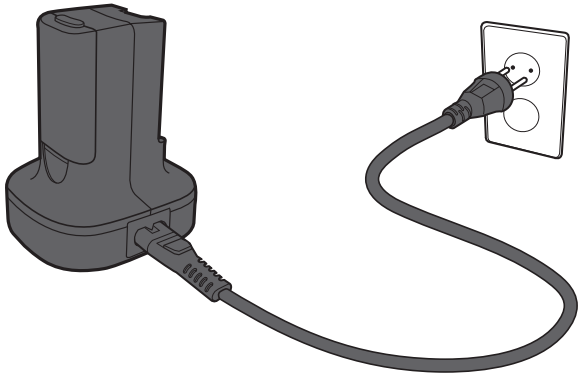

급속 충전 키트에는 충전기, 전원 코드 및 NiMH 충전 배터리 팩이 포함되어 있습니다.

경고

제품을 사용하기 전에 이 설명서 및 Xbox 360 사용 설명서에 명시된 안전을 위한 주의 사항을 읽으십시오. 모든 설명서는 나중에 참고할 수 있도록 보관하십시오. 설명서를 분실한 경우 www.xbox.com/support 를 방문하거나 Xbox 고객 지원 센터로 문의하십시오(“도움이 더 필요한 경우” 참고).

전기 및 전자 장비 폐기물(WEEE)의 재활용을 관할하는 규정을 비롯하여 지역 및 국가의 폐기물 처리 규정(해당되는 경우)에 따라 이 제품을 폐기하십시오.

충전 배터리 안전성

무선 컨트롤러 및 급속 충전 키트에는 Xbox 360 호환 로고가 표시된 Microsoft 승인 충전 배터리 팩만 사용하십시오. 승인되지 않은 배터리 팩을 사용할 경우 과열이나 화재 또는 폭발로 인해 상해를 입을 수 있습니다.

배터리를 잘못 사용하면 배터리 액이 누수되거나 과열 또는 폭발할 수 있습니다. 누수된 배터리 액은 부식성 및 독성이 있기 때문에 피부나 눈에 화상을 입힐 수 있고 삼키면 몸에 해롭습니다. 부상의 위험을 줄이려면 다음 사항에 주의하십시오.

- Xbox 360 급속 충전 키트, Xbox 360 플레이 & 충전 키트 또는 기타 Microsoft가 승인한 충전기roman 충전합니다.

- 배터리를 어린이의 손이 닿지 않는 곳에 보관합니다.

- 배터리에 열을 가하거나 열거나 구멍을 내거나 자르거나 소각하지 않습니다.

- 배터리 액이 누수되면 누수된 액이 피부나 옷에 묻지 않도록 주의하면서 배터리를 제거합니다. 배터리 액이 피부나 옷에 묻으면 즉시 물로 씻어 냅니다. 새 배터리를 삽입하기 전에 물기 있는 수건으로 컨트롤러를 깨끗이 닦은 뒤 충분히 건조시킵니다.

- 전기 및 전자 장비 폐기물(WEEE)의 재활용을 관할하는 규정을 비롯한 지역 및 국가의 폐기물 처리 규정에 따라 배터리를 재활용하거나 폐기합니다.

- 과열되거나 화재가 발생할 수 있으므로 배터리 단자에 금속 물질이 닿지 않게 하십시오. 예를 들어 배터리를 열쇠나 동전과 함께 주머니에 넣고 다니지 마십시오.

전기 안전

여러 다른 전기 장치와 마찬가지로, 다음 예방 조치를 취하지 않으면 감전이나 화재로 심각한 상해를 입거나 목숨을 잃을 수 있으며 급속 충전기가 손상될 수 있습니다.

급속 충전기에 맞는 전원을 선택합니다.

- 사용 중인 급속 충전 키트와 함께 제공되거나 공식 수리 센터에서 받은 전원 코드만 사용해야 합니다.

- 전압과 주파수가 맞더라도 발전기나 변환기 등의 비표준 전원은 사용하지 마십시오. 표준 콘센트로 제공되는 AC 전원만 사용해야 합니다.

전원 코드의 손상을 막으려면 다음을 수행하십시오.

- 전원 코드를 밟고 다니지 마십시오.

- 전원 콘센트 및 급속 충전기에 연결된 코드가 끼이거나 심하게 구부러지지 않도록 하십시오.

- 전원 코드를 비틀거나 얽히게 하거나 심하게 구부러지거나 또는 함부로 다루지 마십시오.

- 전원 코드를 열원 가까이에 두지 마십시오.

- 전원 코드를 어린이나 애완동물의 손이 닿지 않는 곳에 두고 전원 코드를 물거나 씹지 않도록 하십시오.

- 전원 코드를 뽑을 때는 플러그를 잡고 뽑아야 합니다. 코드 자체를 당기지 마십시오.

전원 코드가 어떤 형태로든 손상된 경우 즉시 사용을 중단하고 Xbox 고객 지원 센터에 교체를 요청하십시오.

변개를 동반한 폭풍이 불거나 장시간 사용하지 않을 경우 급속 충전기의 플러그를 뽑아 놓으십시오.

전원 코드 커넥터를 충전기에 제대로 꽂고 전원 코드를 연결하십시오.

급속 충전 키트 사용

배터리 팩 충전

처음 사용하기 전과 배터리를 다 쓴 경우 Xbox 360 충전 배터리 팩을 충전합니다.

급속 충전기를 사용하여 배터리 팩을 충전하려면 다음을 수행하십시오.

- 충전 배터리 팩을 급속 충전기의 배터리 칸에 삽입하고 밀어 끼웁니다.

참고

배터리를 삽입할 때 손가락이 끼이는 것을 방지하려면 배터리 팩의 평평한 면에서만 밀니다.

- 급속 충전기 전원 코드를 사용하여 급속 충전기를 전원에 연결하십시오.

배터리 팩이 충전됨에 따라 급속 충전기의 등이 빨간색으로 빛납니다. 등이 녹색으로 바뀌면 배터리 팩이 완전히 충전되었고 배터리 팩을 무선 컨트롤러에 사용할 수 있음을 나타냅니다.

참고

- 급속 충전기 또는 배터리 팩의 접속 부분에 손가락이나 금속 부품이 닿지 않게 하십시오. 손상될 수 있습니다.

- Xbox 360 급속 충전 키트를 사용하여 새 배터리 하나를 완전히 충전하려면 일반적으로 최대 2시간이 소요되며 배터리 두 개를 완전히 충전할 경우에는 최대 4시간이 소요됩니다. 실제 충전 시간은 충전 중인 배터리 팩의 상태나 조건에 따라 달라질 수 있습니다.

- 충전 중이나 사용하는 동안에 배터리나 충전기에서 열이 날 수 있습니다. 이것은 일반적인 현상으로 배터리에 문제가 있는 것은 아닙니다.

- 배터리를 오랫동안 사용하지 않으면 충전 전지량이 소실될 수 있습니다. 이런 경우 정상적인 방법으로 배터리를 다시 충전하면 됩니다.

- 처음 사용하거나 오랫동안 사용하지 않은 경우 배터리 팩이 자체 성능을 완전히 발휘하려면 3회에서 5회까지 충전해야 합니다.

- 배터리 수명은 제한되어 있습니다. 배터리 팩의 수명이 오래되었거나 여러 번 충전한 후에는 플레이 시간이 줄어들게 됩니다. 플레이 시간이 너무 짧아졌거나 더 이상 충전이 되지 않으면 배터리 팩으로 교체해야 합니다.

배터리 팩 청소

배터리 접촉 부분을 청소해야 할 경우 반드시 마른 천을 사용해야 합니다. 물이나 화학 물질은 접촉 부분을 손상시킬 수 있습니다.

문제 해결

문제가 생긴 경우 아래 제공된 가능한 해결책을 시도해 보십시오.

충전 등에 불이 들어오지 않습니다.

배터리 팩을 충전기의 배터리 칸에 제대로 끼웠는지 확인합니다. 배터리 팩을 배터리 칸에 제대로 끼웠는데도 등이 녹색이나 빨간색으로 빛나지 않으면 배터리 팩 또는 충전기에 결함이 있는 것일 수 있습니다.

참고

배터리 팩이 손상되면 충전할 수 없으며 컨트롤러에도 손상을 줄 수 있습니다. 배터리 팩이 충격을 받았거나 액체가 빠졌거나 과도한 열에 노출된 적이 있으면 사용이 불가능할 정도로 손상될 수 있으며 해당 지역/국가의 법에 따라 폐기해야 합니다.

배터리 팩을 충전하는 데 시간이 오래 걸립니다.

다 쓴 충전 배터리 팩을 충전하는 경우 시간이 더 오래 걸릴 수 있습니다.

완전 충전이 되었는데도 배터리가 빨리 소모됩니다.

배터리 팩의 수명이 오래되었거나 여러 번 충전한 후에는 플레이 시간이 줄어들게 됩니다. 플레이 시간이 현저하게 짧아졌거나 더 이상 충전이 되지 않으면 배터리 팩을 교체해야 합니다.

도움이 더 필요한 경우


일반적인 질문에 대한 답변, 문제 해결 절차 및 Xbox 고객 지원 센터 연락처 정보를 확인하려면 www.xbox.com/support를 방문하십시오.

수리 및 서비스를 받기 위해 Xbox 360 본체나 해당 액세서리를 판매점에 직접 가져가지 마십시오. 문제 해결 및 서비스 정보를 확인하려면 www.xbox.com/support를 방문하십시오.

절대 직접 수리하려고 하지 마십시오.

Xbox 360 본체, 전원 공급 장치 또는 주변 장치를 직접 분해, 수리 또는 개조하지 마십시오. 감전이나 화재로 심각한 상해를 입거나 목숨을 잃을 수 있으며 보상의 이유로 보증도 무효가 됩니다.

배터리 및 전기/전자 장비 폐기물(WEEE) 처리

 제품 또는 제품 패키지에 이 기호가 있으면 이 제품 또는 포함된 배터리는 생활 쓰레기로 처리할 수 없습니다. 대신 전기 및 전자 장비를 재활용할 수 있는 수거소에 맡겨야 합니다. 분리 수거와 재활용은 천연자원을 보존하고 인체와 환경에 미칠 수 있는 악영향을 방지하는 데 도움을 줍니다. 처리 방식이 올바르지 않으면 전기 및 전자 장비의 유해 물질로 인해 이러한 악영향이 있을 수 있습니다. 배터리 및 전기/전자 폐기물을 버리는 장소는 해당 지방자치단체 사무소, 생활 쓰레기 처리장 또는 제품을 구매한 상점에 문의하십시오.

이 제품에는 NiMH 배터리가 포함되어 있습니다.

이 제품은 NRTL 목록(UL, CSA, FTL 등)에 등재 및/또는 IEC/EN 60950을 준수하는 (CE 마크) 정보 기술 장비와 함께 사용됩니다.

저작권

URL 및 기타 인터넷 웹 사이트 참조를 포함한 이 설명서의 내용은 예고 없이 변경될 수 있습니다. 다른 설명이 없는 한, 용어에 사용된 회사, 기관, 제품, 도메인 이름, 전자 메일 주소, 로고, 사람, 장소 및 이벤트 등은 실제 데이터가 아닙니다. 어떠한 실제 회사, 기관, 제품, 도메인 이름, 전자 메일 주소, 로고, 사람, 장소 및 이벤트와도 연관시킬 의도가 없으며 그렇게 유추해서도 안 됩니다. 귀하에게 적용되는 저작권법을 준수하는 것은 귀하의 책임입니다. 저작권에서의 권리와는 별도로, 이 설명서의 어떠한 부분도 Microsoft의 명시적인 서면 승인 없이는 어떠한 형식이나 수단(전자적, 기계적, 복사기에 의한 복사, 디스크 복사 또는 다른 방법) 또는 목적으로도 복제되거나, 검색 시스템에 저장 또는 도입되거나, 전송될 수 없습니다.

Microsoft는 이 설명서 주요 내용에 관련된 특허권, 특허출원, 상표권, 저작권, 저작권, 또는 기타 지적 재산권 등을 보유할 수 있습니다. 서면으로 체결된 라이선스 계약에 따라 Microsoft로부터 귀하에게 명시적으로 제공된 권리 이외에, 이 설명서의 제공은 귀하에게 이러한 특허권, 상표권, 저작권, 또는 기타 지적 재산권 등에 대한 어떠한 사용권도 허여하지 않습니다.

© 2011 Microsoft Corporation. All rights reserved.

Microsoft、Xbox、Xbox 360、Xbox LIVE、Xbox 로고 및 Xbox LIVE 로고는 Microsoft 그룹 계열사의 상표입니다.